


2203-1

PROJECT NO

3

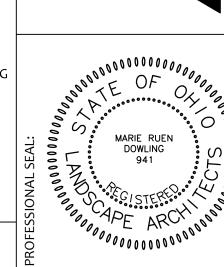



Not to Scale

- SAWCUT & REMOVE EXIST. ASPHALT PVMT. & BASE. SEE PLAN FOR LOCATIONS.

- EXISTING ASPHALT PVMT.

REMOVE ALL LOOSE

PVMT PRIOR TO SEALCOATING.

DEBRIS & THOROUGHLY CLEAN EXISTING ASPHALT

1. ANY ADJACENT PAVEMENT OR CURBS DAMAGED

- APPLY HOT CRACK SEALANT TO PVMT

Not to Scale

REPAIR JOINTS AND TO CRACKS IN EXISTING ASHPALT PVMT PRIOR TO

- SEALCOAT EXISTING AND REPAIRED

ASPHALT PVMT -- SEE SPECS

SEALCOATING -- SEE SPECS

PROJECT NO 2203-1 DRAWN BY CHECKED BY

DETAILS

L-500

SHEET NO