
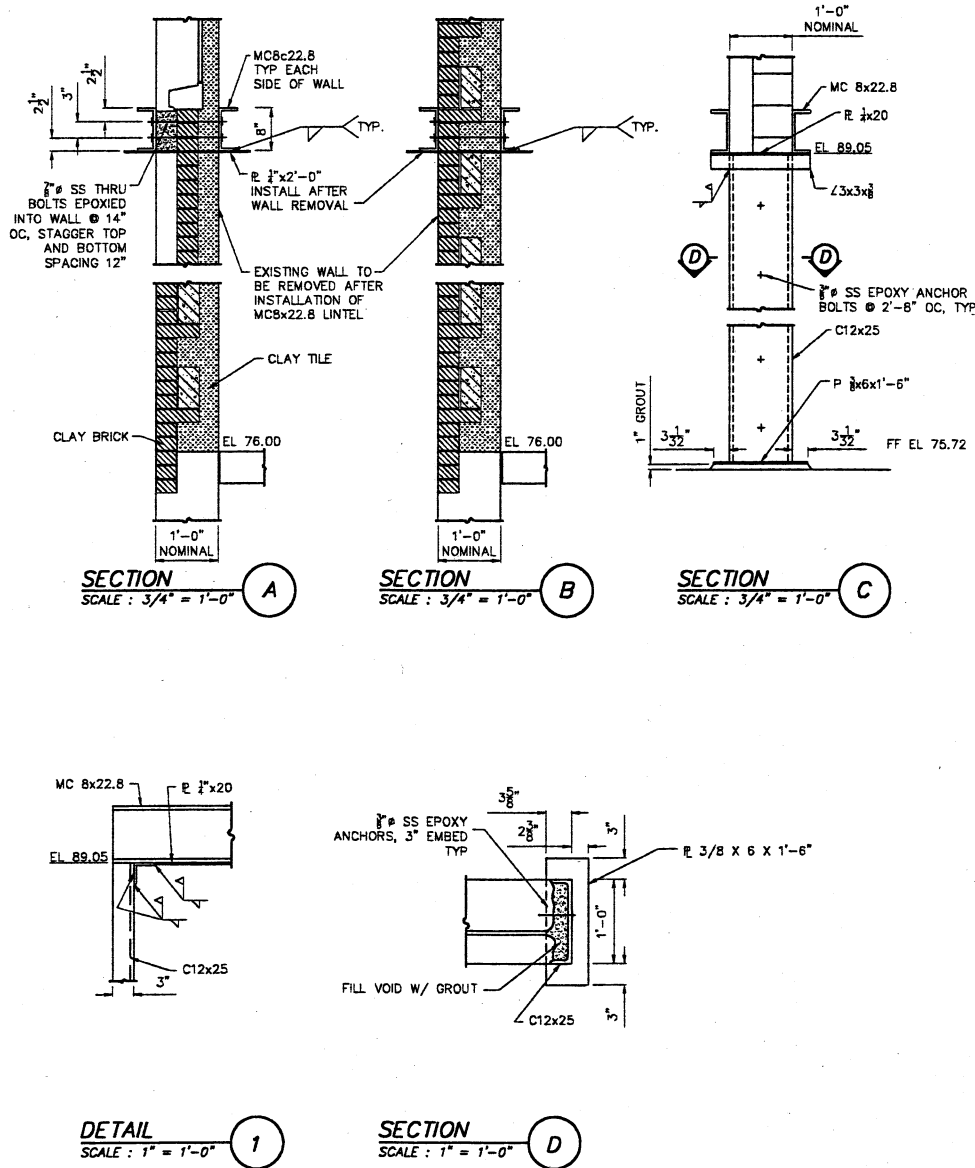


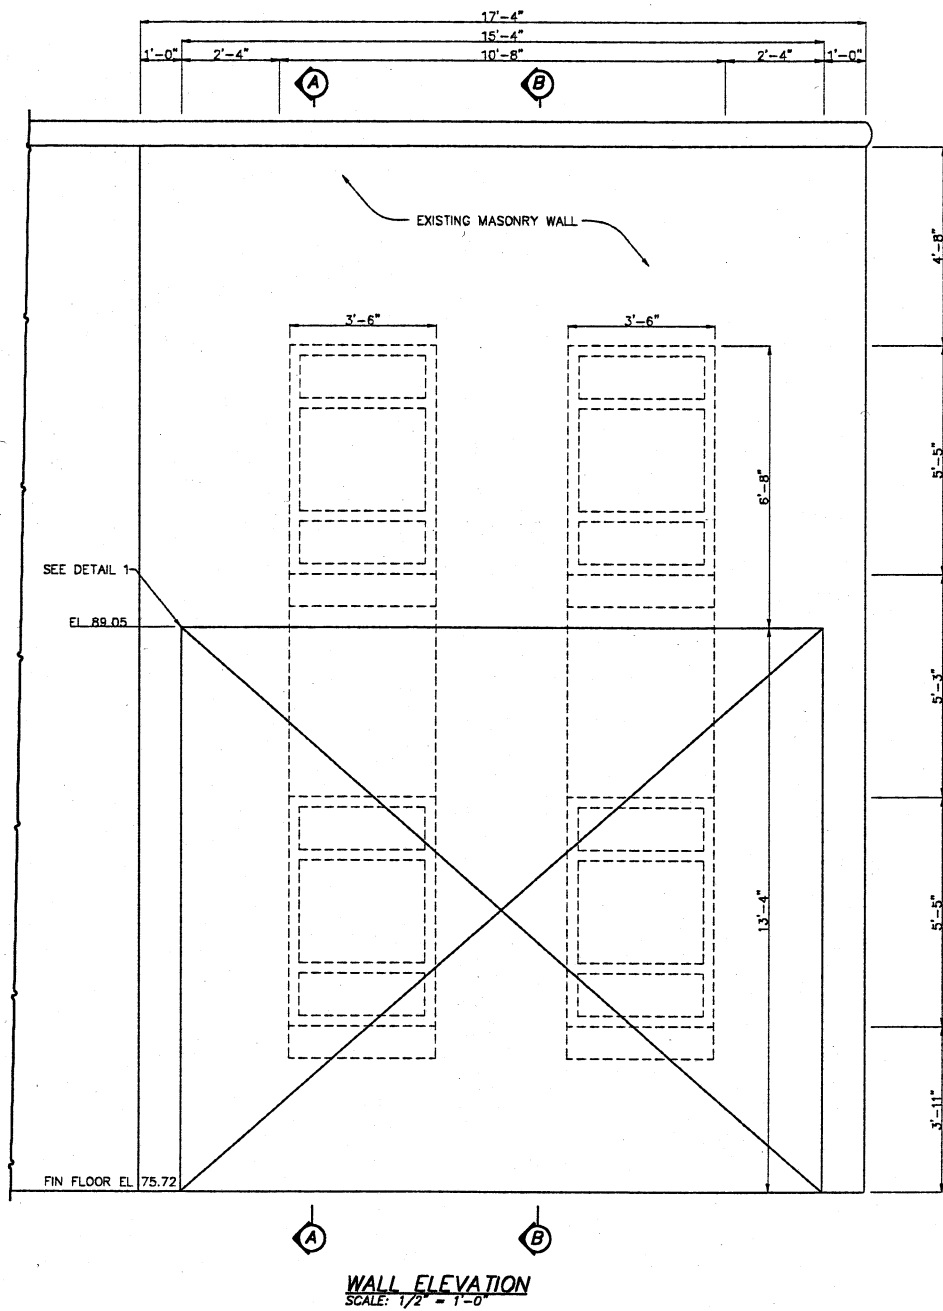

- LINTEL INSTALLATION
- 1) INSTALL 7/8" SS THRU-BOLTS USING EPICON C-8 EPOXY
 - 2) INSTALL MC8 CHANNELS ON EACH SIDE OF WALL
 - 3) FILL VOIDS BETWEEN WALL AND MC8 WITH GROUT
 - 4) REMOVE SEGMENT OF WALL (24" MAX) TO INSTALL END SUPPORTS. INSTALL ANCHORS AND GROUT BETWEEN CHANNEL AND WALL
 - 5) REMOVE WALL BELOW LINTEL
 - 6) INSTALL 1/4"x20" PLATE

THIS DRAWING IS AN INSTRUMENT OF SERVICE FOR THE PROJECT AND SHALL BE USED ONLY FOR THE PROJECT AND SHALL NOT BE REPRODUCED, COPIED, OR DISTRIBUTED TO OTHERS IN ANY FORM OR USED FOR ANY OTHER PROJECT WITHOUT THE WRITTEN CONSENT OF C.T.I. C.T.I. IS NOT RESPONSIBLE FOR ANY CONSEQUENCES RELATED TO THE REUSE OF THIS DRAWING OR PORTIONS THEREOF.

REVISIONS	DATE	BY	APPROVED
NO.			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			

DESIGNED BY
R.L.P.

DRAWN BY
A.M.F.

CHECKED BY
W.A.D.

APPROVED BY
W.A.D.

ENVIRONMENTAL, INC.
ENGINEERS IN WATER AND EARTH SCIENCES
UNIONTOWN, OHIO

CITY OF MASSILLON, OHIO
WWTP UPGRADE 2000
ODOR CONTROL MODIFICATION - SECTIONS AND DETAILS

JOB NO.
E9031

DATE
08/13/01

SCALE
AS NOTED

SHEET
SP35